FUSION
HARDWARE GROUP

TOLL FREE CUSTOMER SERVICE 877-215-4683

KNOB

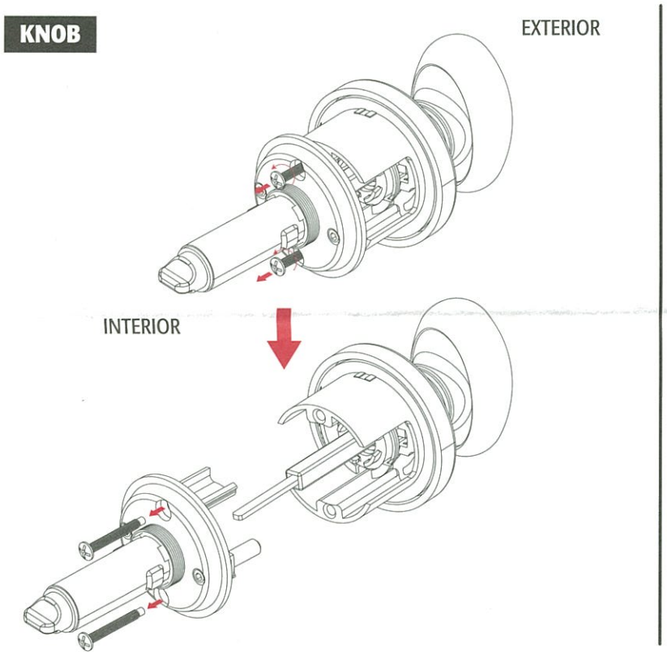

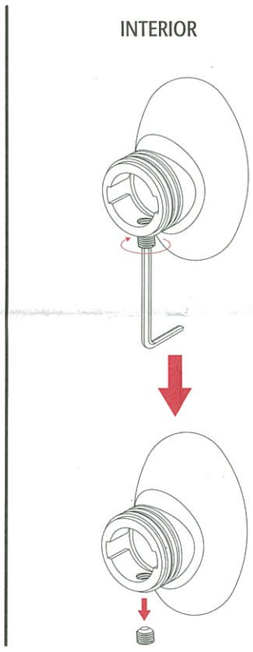

LEVER

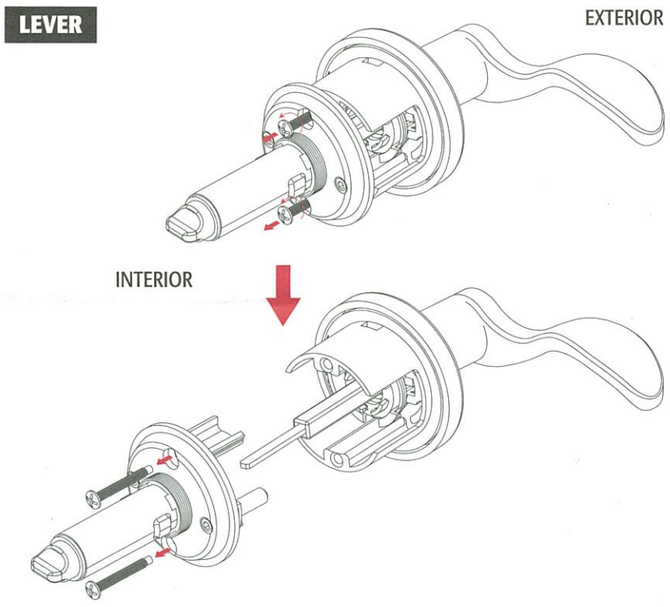

Keyed Entry Installation

① Install latch into door, first adjusting for appropriate backset.
② Insert assembled Exterior half into door and through latch
③ Attach interior chassis with 2 screws - holes at 12 and 6 o'clock position. On levers be sure the "UP" label is on top
④ Screw threaded interior rose on to chassis
⑤ Attach Knob with set screw provided or "snap" Lever into place

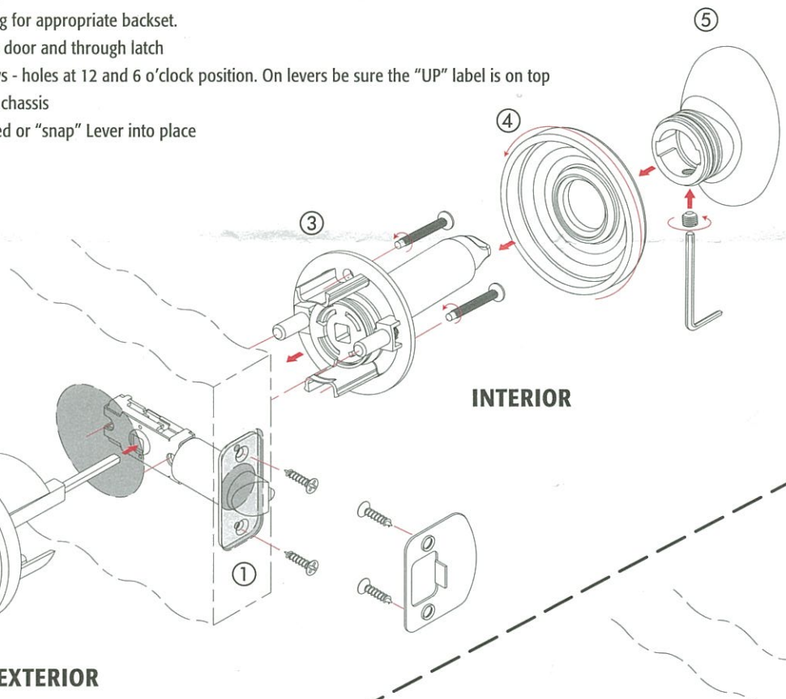

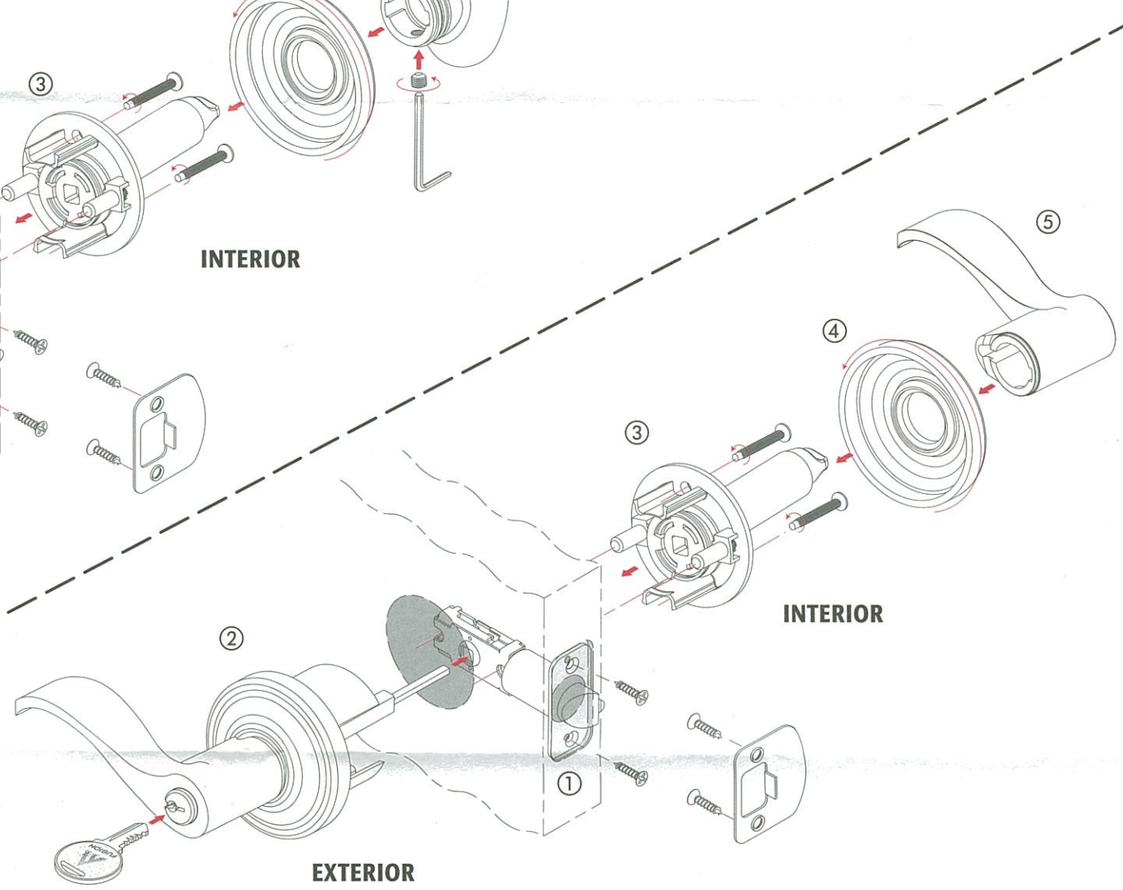

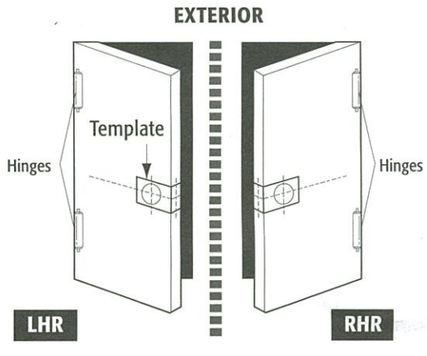

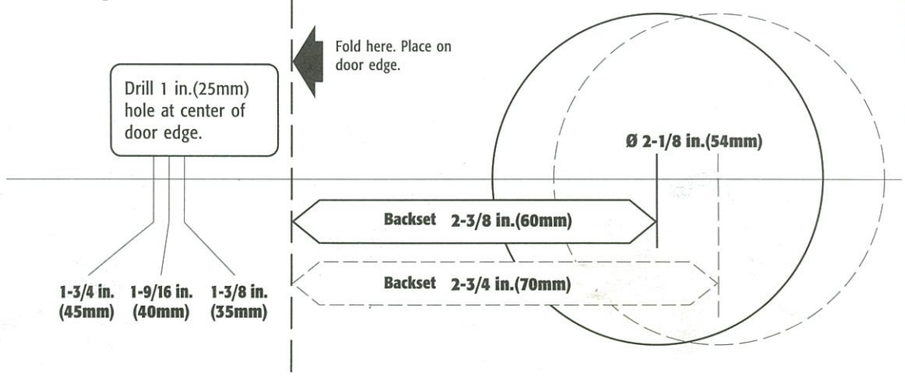

CARE AND MAINTENANCE

THE FOLLOWING CARE INSTRUCTIONS SHOULD BE FOLLOWED TO ENSURE A LONG LASTING FINISH:

1. Remove locks, or do not install locks, prior to painting you door.
2. Periodically clean with mild soap and a soft cloth only.
   Do not use abrasives or harsh chemicals, and avoid sharp or scratching objects.

TFN-00FB012
Rev 10/12-00